


Clip Lok brackets on roof

Place brackets on roof with a spacing between brackets of 1,2m to 1,4m.

Then clip the rail onto the roof hooks. You must hear the "click" .

Tighten the bolt under the roof clamp to secure rail to the roof hook.

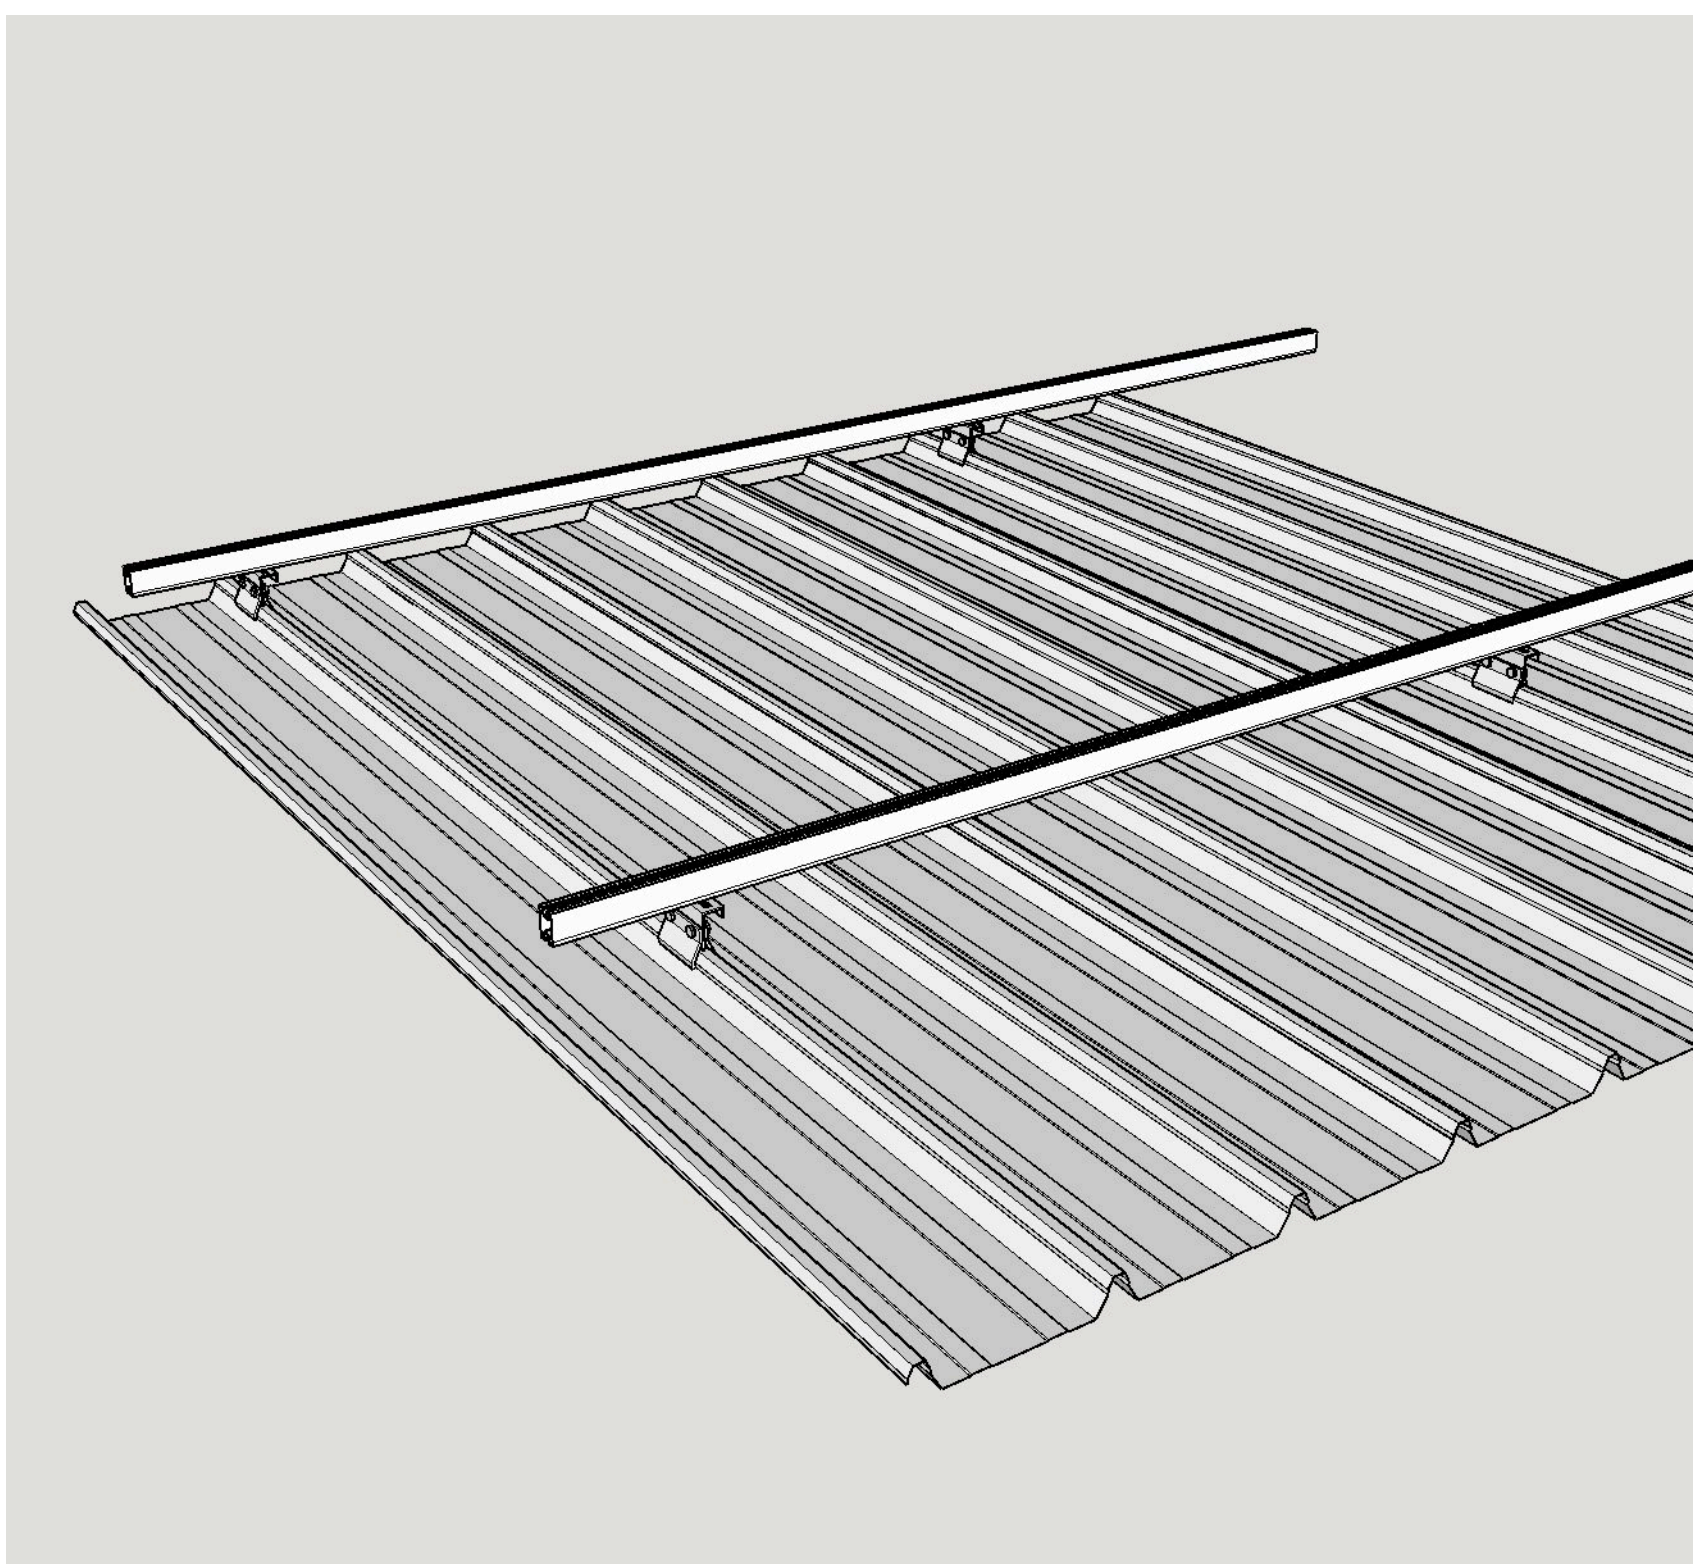

**Panel, middle clamp and
End clamp installation.**

Place the panels onto the rails and clip- the end clamp into the rail as shown. You must hear a "click". Leave the end clamp loose for now.

Now place a middle clamp as shown. Then slide the next panel into place so that one middle is shared between 2 panels.

Continue with installation until row is complete.

Then straighten the panels on the structure to make sure the panel overhang on the top and bottom is the same.

Then tighten the end and middle clamps.
Torque middle and clamp to
8nm

