



Slate tile installation process.

All slate tiles nail holes come predrilled from the factory. These holes are used to nail the slate tile to the brandering. Using these holes as a guide it can be determined where the brandering is.

A 7mm pilot hole needs to be pre drill through the slate Tiles and into the wood brandering below. Making sure to only to drill through the slate and not the wood.

Then screw the slate bracket as indicated Into the wood brandering. Tighten screw until rubber pad is firmly Squeezed. Roof clamp spacing should be around 700mm Apart.

Clip on rails as indicated and tighten bolts On the clip to secure rails.

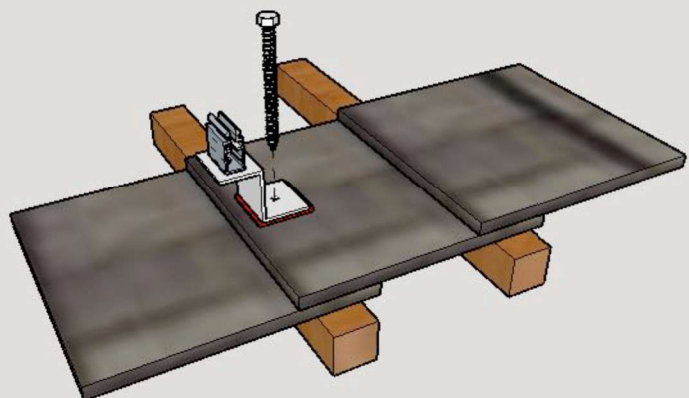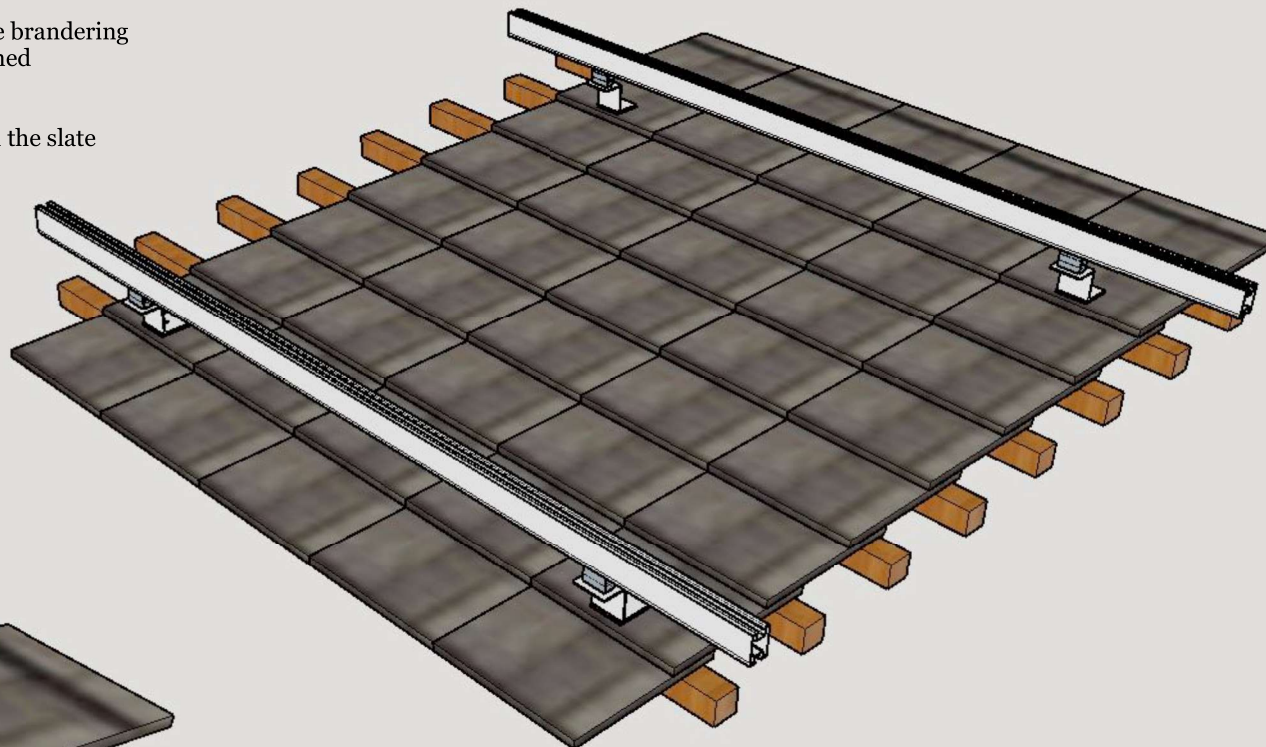

Slate roof installation process



REVISIONS

	MM/DD/YY	REMARKS
1	--/--/--	...
2	--/--/--	...
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...

Once rails have been clipped in
And tightened on to the roof
Clamps.

Then place panels onto rails as shown.

Insert middle and end clamps and tighten
To 8nm.

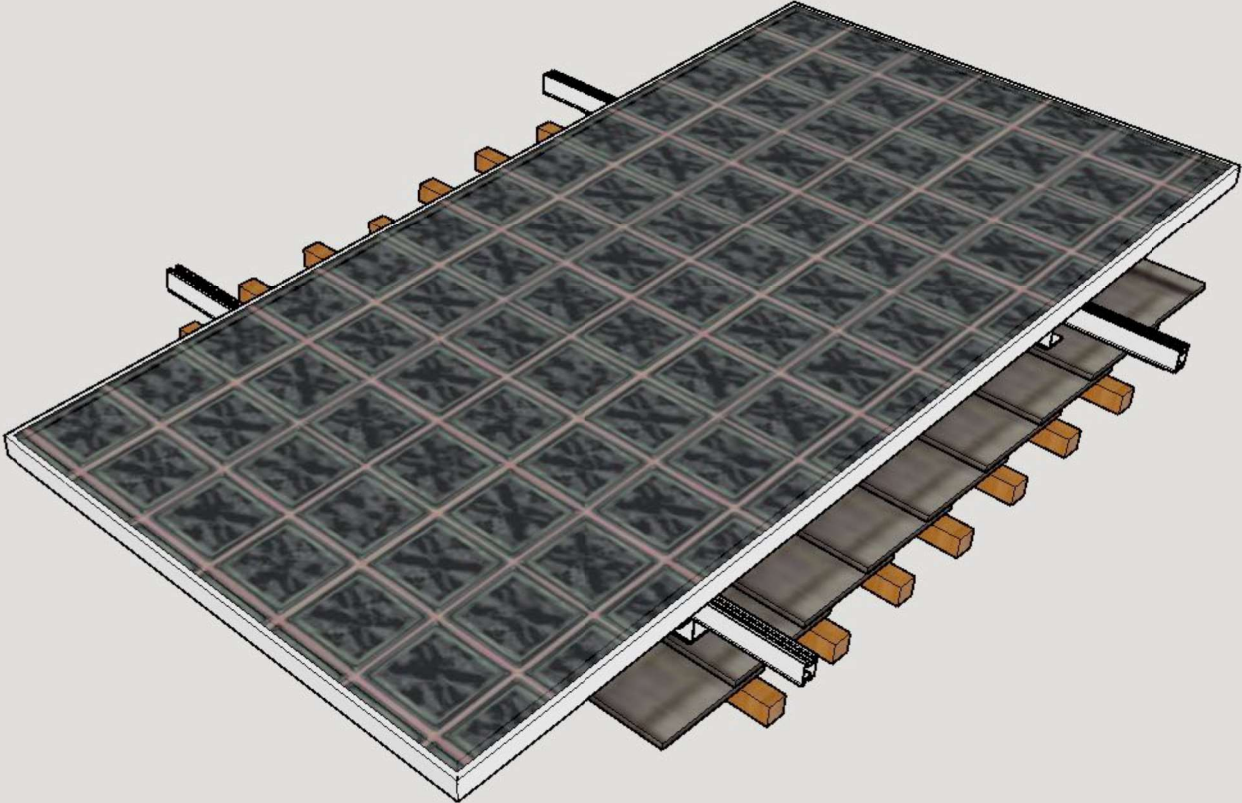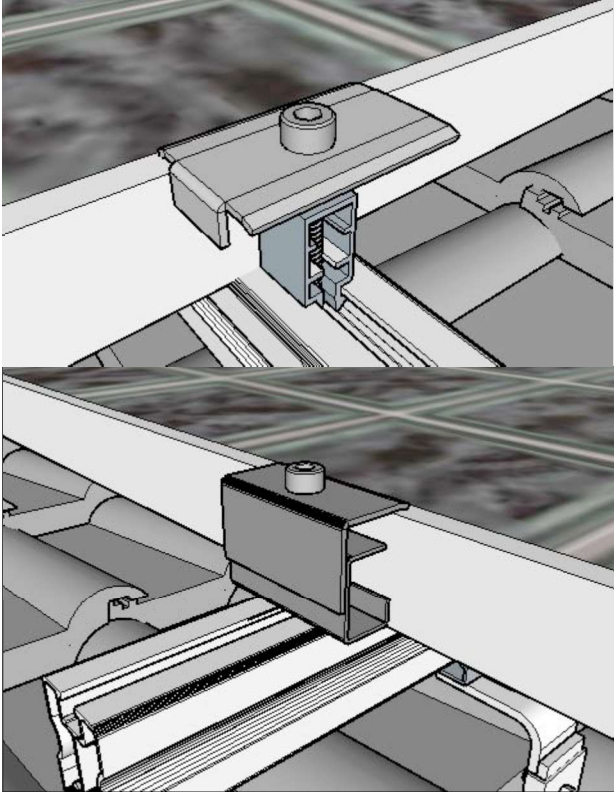

Slate roof installation process

REVISIONS		
	MM/DD/YY	REMARKS
1	___/___/___	...
2	___/___/___	...
3	___/___/___	...
4	___/___/___	...
5	___/___/___	...